



310XP Wireless Thin Client

Whenever, Wherever, Mobility

Overview

The BOSTablet delivers the very best in mobile computing. Healthcare, manufacturing, distribution, retail, you name the industry. The BOSTablet is a perfect match for applications such as patient care, inventory management, shop floor, shipping, receiving, and data collection. The integration of powerful elements -- AMD LX800 processor, Microsoft's XP-embedded operating system, versatile networking options, together with Citrix ICA and Microsoft RDP client/server computing protocols makes the BOSTablet a compelling solution for mobile computing.


Features

- 10.4" TFT Touch Screen
- Full Screen 5250/3270
- Ruggedized Industrial Strength Case
- Built in Authentic biometric sensor compatible with Valid Technologies
- 802.11 b/g Wireless, WEP, WPA, WPA2, PEAP, 802.11x
- Available PCMCIA slot can be used with Verizon, Sprint, AT&T, etc.
- IE 6 SP2 – MS JVM, Sun Java, Shockwave, Flash, and Media player 10
- Adobe 7.05 and Office Viewers 2003
- Hot Swap Batteries (up to 10 hours)
- Device support includes scanners, USB Keyboards, Bluetooth
- Various mounting options



Highlights

Unique features include customizable "Hot Spots" and full integration with BOSaNOVA Management Software. While "Hot Spots" enhance the use of the touch screen by triggering pre-recorded macros easing navigation through your application, integration with the BOSaNOVA Remote Manager provides centralized support and control. Terminal Emulations include BOSaNOVA Secure GUI (5250) and Ericom Powerterm (3270, VT100, ...) by request.

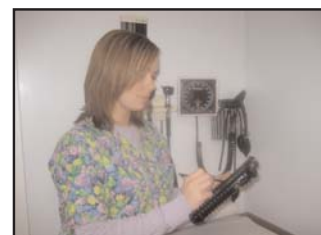

BOSaNOVA, Inc. 2012 W. Lone Cactus Drive, Phoenix, AZ 85027

Tel: (866) 865-5250 ● Fax: (623) 516-8697 ● sales@bosanova.net ● www.bosanova.net



310XP Wireless Thin Client

Whenever, Wherever, Mobility

Options

Part Number	310 XP
Standard RAM/Storage	512MB/1GB(RAM/Storage)
Display	10.4" TFT touch display (1024 x 768)
Operating System	Windows XP Embedded
Storage	Internal flash module; CompactFlash slot or HDD; USB
Enclosure	Magnesium-Aluminum alloy
Desktop Cradle	Pass-through for Power and USB for Keyboard and Mouse
Protective Jacket	Adds drop protection
AC/DC Adapter	Input: 100-240VAC Output: 12VDC, 3.5A
Power Cords	USA, EU, UK
Battery Packs (Lithium-Ion)	Internal (14W) Optional: External (28W, 0.5lb), and Tethered Pouch (72W, 1lb)
Network Interface (incl. WLAN)	PCMCIA or mini-PCI; USB; Bluetooth Built-in; CF Slot
Wireless WAN	Integrated 802.11, Bluetooth, WEP, WPA, WPA2, PEAP
Input & Control Buttons	Four (4) Front buttons; One (1) Oval 4-Way; One Power (left edge); One "Trigger" (right edge)
Input/Output Ports	12V DC-in Jack; Microphone-In; Headset; Jack; USB Port 2.0
Dimensions	8.3 x 10.3 x 0.8 (in) 210 x 261 x 18 (mm)
Base Weight	2.05 lbs (0.93 kg)
Operating Temp.	0° – 40°C

Ordering Information

PID	Description
310XP	Embedded XP, Touch Screen, 5250, IE6, Office Viewers, Shockwave, Flash, Media Player, RDP, ICA
8006	Ericom Emulation for XPe
ACC-006-07	External Battery Pack (Li-Ion, 20W) External, snap-on, hot-swappable battery pack – doubles the duration of mobile operation
ACC-001-05	External Battery Charger Kit (with AC adapter and power cord) Recharges external battery pack offline without affecting usage of device

Accessories

Tablet Carrying case with USB keyboard
Tray for vehicle mount Cradle



Keyboard and keyboard tray for mount
cradle



USB - Ethernet Dongle



External battery charger kit



Screen protectors for 10.4" display



Stylus



Desktop Charging Cradle



Internal battery pack (Li-Ion, 14W)



Automobile power adapter
(12v, 3.5A, 42W) with power cord



External Battery Pack (Li-Ion, 28W)



Desktop Stand



Handstrap, with 4 slotted mounts
and screws



6 bay external battery charger



Protective rubber bumper



USB 2.0 1.8" Mobile Disk Box



BOSaNOVA, Inc. 2012 W. Lone Cactus Drive, Phoenix, AZ 85027

Tel: (866) 865-5250 • Fax: (623) 516-8697 • sales@bosanova.net • www.bosanova.net